

Table of Contents

1

Legal notices	2	Surf & fun	19
Safety precautions	4	Internet browser (WAP)	19
Phone overview	5	Games & more	20
Display symbols (selection)	7	Setup	21
Getting started	8	Profiles	21
Using the SIM card/battery	8	Display	21
Charging the battery	8	Call setup	22
Switching on/off, PIN	9	Clock	23
Enter PIN	9	Connectivity	23
Strong reception signal	9	Security	23
Emergency number (SOS)	10	Network	24
Without a SIM card	10	Accessories	24
General information	10	Ringtones	25
User guide	10	Extras	25
Menu control	10	Alarm clock	25
Standby mode	10	Calculator	25
Security	10	Stopwatch	25
Codes	10	SIM services (optional)	26
Clear SIM card barring	11	Fast access	26
Making a phone call	11	Own stuff	26
Text entry	12	Questions & Answers	27
Text entry without T9	12	Customer Care	30
Text entry with T9	13	Care and maintenance	31
Predef. texts	14	Product data	32
Phonebook	14	U.S. FDA	33
<New entry>	14	FCC/Industry Canada Notice	39
Call (search for an entry)	14	Ten driving safety tips	40
Edit entry	14	Intellectual property	42
Assign picture	15	Accessories	43
Groups	15	SAR (A65)	44
Call log	15	End user license agreement	46
Durat/charges	15	Menu tree	51
Camera	16	Index	55
Voice mail/CB services	16		
SMS	17		
MMS	18		
Message lists/			
Message settings	19		

See also Index at the end of this User Guide

Legal notices

The mobile phone described in this guide is approved for use on the GSM and GPRS networks operating on the GSM 900, 1800 (DCS/PCN) and 1900 (PCS) bands. It is approved for use in the country where it was originally sold and may be approved for use in other countries.

© 2004 Siemens Information and Communication Mobile, LLC.
All rights reserved.

Siemens and the A65 model phone are trademarks or registered trademarks of Siemens AG and/or its affiliates in the United States and/or other countries.

T9® is a registered trademark of America Online, Inc. in the United States. Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S and other countries. The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Disclaimer

THE INFORMATION CONTAINED IN THE USER GUIDE IS WRITTEN FOR THE A65 PHONE. SIEMENS RESERVES THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS TO THE PRODUCTS AND ANY OF THE FEATURES OF THE PRODUCTS DESCRIBED IN THIS DOCUMENT WITHOUT PRIOR NOTICE. THE CONTENTS OF THE USER GUIDE ARE PROVIDED "AS IS". EXCEPT AS

REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. SIEMENS RESERVES THE RIGHT TO REVISE THE USER GUIDE OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE. UNDER NO CIRCUMSTANCES SHALL SIEMENS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

Export Information

The mobile phone may be subject to export regulation of the United States and other countries. Diversion contrary to law is prohibited. You must comply with all applicable export laws, restrictions and regulations of the United States foreign

agencies or authorities, and may not export, or transfer for the purpose of re-export, the mobile phone or any part of the phone in violation of any applicable restrictions, laws or regulations, or without all necessary approvals.

Network Services

A number of features included in this guide are called Network Services. They are special services provided by wireless service providers. In order to use any of these Network Services, you must subscribe to these service(s) from your service provider and obtain instructions for their use. Some of these Network Services may not be available when roaming on a network other than your home network.

Standby and Talk Time Information

The mobile phone incorporates features that are new to the mobile phone world. These may include color displays and lighting, graphic games, music reproduction and browsing the Internet. The way you use the display and the features will affect the performance of the battery and how long it lasts between charge cycles. The quoted standby times and talk times show the minimum and maximum performance that can be expected from the battery under normal network conditions and with the default settings as

set by the factory. However, playing games (particularly with the backlight continuously switched on) and listening to music will shorten the time available for standby and to make and receive telephone calls. Operation times also vary depending on network conditions, SIM settings, charging and battery condition, how you use your phone and other factors.

Memory

The mobile phone contains an internal memory device that stores the software required to operate the mobile phone, communicate with the GSM/GPRS network and provide the user interface. Some features in the internal memory run additional devices and some additional games and utilities. The amount of memory available in the mobile phone is finite and may be insufficient to store large numbers of applications and files.

Warning!

Remember to back up your data and to do so frequently. Always back up all data and programs before sending the mobile phone in for repair.

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (Volt) must not be exceeded. Otherwise the charging device may be destroyed.



The ringtone (S. 25), info tones and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (S. 12). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the operating licence.

Important:



Please dispose of unwanted batteries and phones as permitted by the laws in your country.




The phone may cause interference in the vicinity of TV sets, radios and PCs.




Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee! These safety instructions also apply to Siemens original accessories.

Phone overview




①  **Call key (press lower part of button)**
Dial phone number /name displayed, take calls. Show last phone numbers dialed in standby mode.

②  **On/Off/End key (press lower part of button)**


- Switched off: press and **hold** to switch on.
- During a call or in use: press **briefly** to finish.
- In menus: press **briefly**: one level back. Press and **hold**: return to standby mode.
- In standby mode: Press and **hold** to switch off phone.

③ **Control key**




In lists and menus:


-  Scroll up and down.
-  Function call.
-  Back a menu level.

During a call:

-  Open call menu.

In standby mode:

-  Open Phonebook.
-  Open menu.
-  GPRS info.

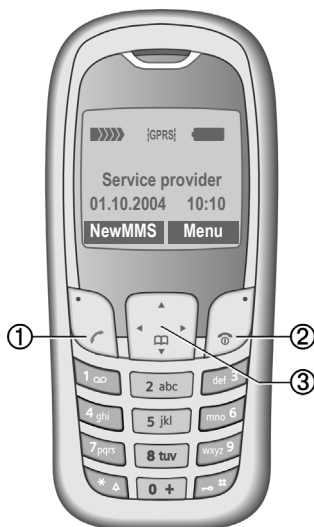

6 Phone overview

① Integrated antenna


Do not interfere unnecessarily with the phone above the battery cover. This reduces reception quality.

② Loudspeaker

③ Display symbols

Signal strength/GPRS available/battery level.

④ Display keys (press upper part of button)

The current functions of these keys are shown in the bottom line of the display as **text**/symbol (e. g. ).

⑤ Input keys

Numbers, letters.

⑥ * Press and hold

- In standby mode: switch on/off all signal tones (except alarm).
- For incoming calls: switch off ring tones only.

⑦ # Press and hold

In standby mode: switch key lock on/off.

⑧ Microphone

⑨ Plug socket

Connection for charger, headset, camera etc.



Display symbols (selection)

7

Display symbols (selection)

Display symbols

	Signal strength.
	Charging.
	Battery charging status, e.g., 50%.
	Phonebook
	Call log
	Surf & fun
	Ringtones
	Messages
	Camera
	Extras
	Own stuff
	Setup
	All calls are diverted.
	Ringer off.
	Short ring (beep) only.
	Ring only if the caller is stored in the Phonebook.
	Alarm set.
	Alarm clock active.
	Key lock active.
Phone numbers/names:	
	On the SIM card
	On the SIM card (PIN 2 protected).
	In the phone memory.
	No network access.
	Function activated/deactivated.

	Phonebook.
	Indicates whether upper- or lower case letters are active.
	Text input with T9.
	Activated and available.
	Registered.
	Temporarily interrupted.
	GPRS download.
	WAP Online.
	WAP via GPRS online.
	WAP No network.
	Headset active.
	Auto answer feature on.

Depending on your service provider, some of the symbols displayed here may differ from those on the phone.

Soft keys


	Message received.
	MMS received.
	MMS notification.
	Voice mail received.
	Data received.
	Picture received.
	Melody received.
	Unanswered call.
	Store in Phonebook.
	Retrieve from Phonebook.

Getting started


Using the SIM card/battery

Your phone's display is delivered with a protective film. **Remove this film before getting started.** To avoid damage to the display, the phone should not be used without the front cover. The service provider supplies you with a SIM card on which all the important data for your account is stored. If the SIM card is credit card-sized, snap out the smaller segment and trim any rough edges.


Remove the battery cover upwards ①.

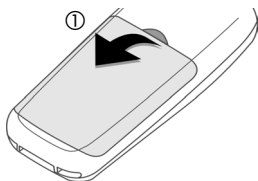

Insert SIM card ② and push it fully into the locating slot (make sure the angled corner is in the correct position ③). Then push the retaining catch over the top of the SIM card ④.

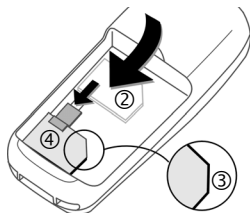


Insert the battery sideways into the phone ⑤, then press downwards ⑥ until it engages.

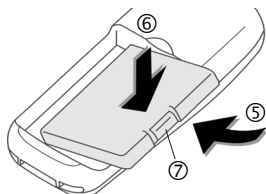

To remove, press the retaining tab ⑦ then lift the battery out.

Insert the battery cover by the tabs at the bottom ⑧, then press downwards ⑨, until it engages.

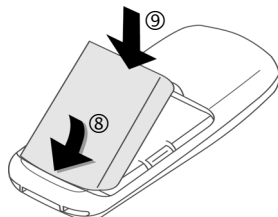


Always switch off phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider if you have an older card.

Functions without SIM card p. 10.

Charging the battery

The battery is not supplied fully charged. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours**. The power supply unit will become hot after extended use. This is normal and is not dangerous.

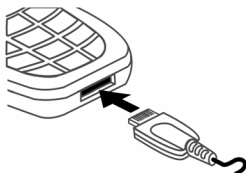

Display when charging is in progress



Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The voltage specified on the power supply unit must not be exceeded.

Charge icon not visible

If the battery was fully discharged, the charging symbol will not be immediately visible on connection to the power supply unit. It will appear after up to two hours. In this case the battery is fully charged after 3 - 4 hours.

Only use the power supply unit provided!

Display while in service


Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is displayed correctly only after uninterrupted charging/discharging. You should therefore **not remove the battery unnecessarily** and where possible **not interrupt charging prematurely**.

Switching on/off, PIN

Turning the phone on/off

Press and **hold** the On/Off/End key  to switch on or off.

Enter PIN

The SIM card can be protected with a 4- to 8-digit PIN.

Enter the PIN using the number keys. The characters * * * * appear to ensure nobody can read your PIN on the display. Correct errors with **Clear**.

Confirm your input with **OK**. Logging on to the network will take a few seconds.

Switching on your phone for the first time

Time/date


The clock must be set to the right time once at start-up.

Press **Yes**. First enter the date (day/month/year), then the time (24 hours, including seconds). Press **OK**. The time and date are updated.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Time zones

Specify your current time zone.

Select the desired time zone from the list with . Apply it with **Set**.

Strong reception signal



Strong receive signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Emergency number (SOS)

Use only in real emergencies!

By pressing the soft key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Without a SIM card







 

If you switch on the phone **without** a SIM card you can still use some phone functions.

Press **Menu**. The functions are displayed (f.e. Emergency, SOS).

General information

User guide

The following symbols are used to explain operation:

-  Enter numbers or letters
-  On/Off/End key
-  Call key
-  Press the control key on the side indicated
-  Soft key left
-  Soft key right
-  **Menu** Displays a soft-key function
-  Function depends on the service provider, special registration may be necessary

Menu control

The steps needed to reach a function are shown in **concise form** in this user guide.

E. g. to display call list for missed calls:

press **Menu** →  → **Calls missed**

This corresponds to:


Open the main menu, select the Call log

menu, then select the function **Calls missed**. You have to confirm with **Select**.

Standby mode

When the name of the service provider appears on the display, the phone is in **standby mode** and **ready for use**.

The left soft key may have different functions pre-assigned to it.

Press and **hold** the On/Off/End key  to return to standby mode from any menu option.

Security

Codes

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

Menu →  → **Security** → **Codes**
→ Select a function

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

Change PIN

You can change the PIN to any 4-8 digit number you may find easier to remember.

Change PIN2

(Display only if PIN 2 is available). Proceed as with Change PIN.

Change phonocode

You define the phone code (4 to 8 digits) when calling up a phone-code protected function for the first time. It is then valid for all phone-code protected functions. Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. In such an instance contact Siemens Service (p. 30).


Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN entry is deactivated (p. 10) confirmation is required to switch on phone.


This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.

After long press of the On/Off/End key  to switch on the phone or abort the operation with **Cancel**.


Making a phone call

Dialling with number keys


The phone must be switched on (standby mode). Dial number (always with area code, if necessary with international dialling code). To dial International dialling codes press and **hold 0** until a "+"-is displayed. Press **+List** and select country.

Short press **Clear** to clear the last digit, a **long press** clears the entire phone number. To dial press the  key.

End call




Press the End key  **briefly**. Press this key even if the person on the other end of the line has hung up first.

Set volume


Use the control key  to start adjusting the volume during conversation. Set volume with  and confirm with **OK**.

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.


Redial previous numbers

For redialling previously dialled numbers press the Call key  once, pick out the required phone number from the list with , then press  again.

If number busy

Press **Auto dial** for automatically dialling the phone number ten times at increasing time intervalls or press **Call back** () for phone ringing when the busy number is free. Press **Prompt** and a beep will remind you to redial the displayed phone number after 15 minutes.

Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone. Press **Answer** or .

Please make sure you have accepted the call before holding the phone to your ear. This will prevent a loud ring tone from damaging your hearing!

12 Text entry

If the phone number has been transmitted by the network, it is displayed. If the caller's name also appears in the Phonebook, this will appear instead of the number. If set, a picture can be displayed instead of the bell icon.


Reject call

Reject or  press **briefly**.

Speakerphone


You can put the phone down during a call. You can then hear the caller via the loudspeaker.


Activate handsfree function with **Speaker**. and switch on with **Yes**.

Adjust the volume with . Pressing **Speaker**. switches off "handsfree talking".

Always switch off "handsfree talking" before holding the phone to your ear! This will avoid damage to your hearing!

Swapping between 2 calls


Make a new connection during a call with **menu** → **Hold** →  (dial a new phone number). With **menu** → **Swap** you can swap back and forth between both calls.

If you are called during a phone call and you can hear the "call waiting tone" (p. 22), you can accept the waiting call with **Swap**, putting the current call on hold to do so. Swap back and forth between the calls as previously described or end the current call with  and accept the new call with **Answer**.

Multi Party

Make a new connection during a call with **menu** → **Hold** →  (dial a new phone number). With **menu** → **Multi Party** you can join the held call.

Repeat this procedure until all participants are linked together (up to 5 participants).

All calls in the conference are ended simultaneously when the End key  is pressed.

Text entry


Text entry without T9

Press number key repeatedly until the required letter appears. The cursor advances after a short delay. Example:

2 Pressing briefly **once** types the letter **a**, twice the letter **b**, etc. Press and **hold** to write the number.

Ä,ä,1-9 Umlauts and numbers are displayed after the relevant letters.

Clear Press **briefly** to delete the letter before the cursor, press and **hold** to erase the whole word.

 Move the cursor (forwards/back).

Press **briefly**: Switch between *abc*, *Abc*, *ABC*, *T9abc*, *T9Abc*, *T9ABC*, *123*. Status indicator in the top line of the display.

Press and **hold**: All input modes are displayed.

***** Press **briefly**: Special characters are shown. Press and **hold**: Open input menu.

0 Press **once/repeatedly**:
., ? ! ' " 0 - () @ / : _
Press and **hold**: Writes **0**.



1 Writes blank. Press twice = skip line.

Special characters

Press **briefly** *. The character map is displayed:

1)	¿	í	—	;	.	,	?	!	+	-
"	'	:	*	/	()	¤	¥	\$	£
€	@	\	&	#	[]	{	}	%	~
<	=	>		^	\$	Γ	Δ	Θ	Λ	≡
Π	Σ	Φ	Ψ	Ω						

1) Line skip

Navigate to characters with ,  and press **Select**.

Input menu

Press and **hold** * with text input.

The input menu is displayed:

Text format (SMS only)

Input language

Mark text

Copy/Add

Text entry with T9

T9 deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options → T9 input → T9 preferred

→ **Change** (activate or deactivate T9)

Select Input language

Select the language in which you want to compose your message.

Options → T9 input → Input language

→ **Select** (the new language can be selected) or **Delete** (T9 dictionary for the selected language will be deleted).

Type a word using T9

The display changes as you proceed.

Therefore, it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:

Press **briefly** # for T9Abc then

4 6 8 3 5 and **1** (the blank ends a word).

Do not use special characters such as Ä but rather use the standard characters, e.g. A; T9 will do the rest for you.

Additional notes

0

Setting a full stop. Word is ended when followed by a blank space. Within a word, a full stop represents an apostrophe or hyphen: e.g. **provider.s** = provider's.



Move to the right. Ends a word.

#



 
Press **briefly**: Swap between: abc, Abc, T9abc, T9Abc, 123. Status indicator in the top line of the display.

Press and **hold**: All input modes are displayed.

Press **briefly**: Select special characters.

Press and **hold**: Open input menu.


T9 word suggestions


If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. The word must be highlighted as **inverted**. Then press   . The displayed word is replaced with a different word. If this is also incorrect, repeat until the correct word is displayed.

To add a word to the dictionary, select **Spell**. Now write the word without T9-support and accept with **Save** into the dictionary.


Correct a word

Words written with T9:

With  move left or right, word by word, until the required word is **inverted**.

With  scroll through the T9 word suggestions again. **Clear** deletes the character to the left of the cursor **and** displays a new possible word!

Words **not** created using T9:

With  move letter by letter to the left/right. **Clear** deletes the letter to the left of the cursor. New characters are inserted at the cursor position.


T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Pref. texts



The phone contains predefined texts that you can add to your messages (SMS, MMS). You can also create and store up to 5 personal stored texts. Each stored text can contain up to 32 characters.

Unlike personal stored texts, predefined texts cannot be changed or deleted.

Write personal stored texts

 →  → **Pref. texts** → **Options**
→ **<New entry>** →  (write personal stored text) → **Save**

Use predefined texts

 (write message text) → **Options**
→ **Pref. texts** →  (select predefined text from the list) → **Select**

The predefined text is inserted into the text to the left of the cursor.

Phonebook

Enter frequently used phone numbers in the Phonebook with a special name. To dial them, simply highlight the name. If a phone number is stored with a name, it appears on the display when you are called. Important numbers can be assigned to different groups.

<New entry>

Open Addressbook (in standby mode)

 → **Select** → Select entry fields

Number: Always enter phone number with prefix.

Name: Enter first name or surname.

E-mail: Enter email address for MMS (max. for 50 addresses).

Group: Organise entries in groups, select with **Change**.

Location: Select location: **Mobile**, **SIM** or **Protected SIM**.

Record no.: This is automatically assigned to the entry.

Press **Save** to store the new entry.

Call (search for an entry)

Open phonebook , select name and select phone number with .

Edit entry

 → Select entry → **Options** → **Edit**
→ Make changes → **Save**.

Assign picture

Assign a maximum of 50 phone numbers to an individual picture. This picture will appear in the display when there is a call from this number.

→ Select entry → **Options** → Picture
→ Select picture → **Open** (the picture is displayed) → **Select**

The picture is assigned to the phone number and it appears with a symbol in the Phonebook.

Delete/change image

If a picture is assigned to a phone number, it can be deleted or replaced.

→ Select entry with picture
→ **Options** → **Select** → Picture
→ **Delete**

Groups

Four groups are specified in your phone to enable you to arrange your Phonebook entries clearly. You can rename these groups.

Open Addressbook (in standby mode)

→ <Groups> (the number of entries is listed behind the group name)
→ Select a group → **Select** (open group) or **Rename** (give group a name)

Ring tone for group

If you assign a ring tone to a group, it sounds when one of the group members rings.

Menu → → Group calls
→ Select a group → **Select**
→ Select ring tone → **Select**

Call log

Your phone stores the phone numbers of calls for convenient redialling.

Menu → → **Select**
→ Select call record → **Select**
→ Select phone number →

Calls missed

The phone numbers of calls that you have not accepted are stored for call-back purposes, if the network supports the "Caller Identity" feature.

Symbol for acc. call.

Calls received

Accepted calls are listed, if the network supports the "Caller Identity" feature.

Calls dialed

In standby mode you have access to the last numbers dialed with .

Delete calls

The records are deleted.

Call list menu

Options → Edit entries.

Durat/charges

You can display the charges and the duration of a call and set a unit limit for outgoing calls.

Menu → → Durat/charges →
Select a function: Last call, All outgoing, All incoming, Remain. units

Select Display data.
Reset Clear display.
OK End display.

16 Camera

Charge sett.

Menu →  → Durat/charges
→ Charge sett.

Currency

(PIN 2 prompt)

Currency for charge display.

Personal rate

(PIN 2 prompt)

Charges per unit/period.

A/c limit

(PIN 2 prompt)

Fix a credit/usage period on a special SIM card.

Auto display

Call duration and call charges are automatically displayed for each call.


Camera

You can use the phone to immediately view, save and send photos you have taken with the "QuickPic Camera". Pictures can be taken in two different formats:

- Low resolution:
QQVGA 160x120 pixels, memory size up to 6 KB for sending as an MMS image (p. 18).
- High resolution:
VGA 640x480 pixels, memory size of one picture up to 40 KB – e.g. for further editing on PC. To allow the picture to be viewed on the phone display, a QQQVGA picture is created for every VGA picture.

In standby mode press **Camera**
or **Menu** → 

First the number of shots still available is shown (depends on resolution chosen). Confirm with **OK** (the last picture taken is

shown) and scroll through photos with .

Picture

A picture requires a few seconds to be processed.

Press **Take**. You will hear an advisory tone when the exposure time has expired. The photo is shown on the display and saved automatically.

Flashlight

In the option menu the flashlight function can be switched on/off.

If the flash is switched on, a command is given to charge the flashlight before taking a picture:

Press **Load** briefly. The flashlight is charged (battery capacity at least approx. 30%). Press **Take** and the photo is taken.

Sending a photo by MMS

You can easily send a photo as an MMS immediately after taking it.

Options → Send via MMS → **Select**
(select the desired resolution) → **Skip**
(skip recording a melody, p. 18)

Voicemail/CB services

Voice mail/mailbox

Menu →  → Msg. setup
→ Voice message

Most service providers offer you an external answering service. In this mailbox, a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this service with your service provider and perform some manual settings.

Settings:



Your service provider supplies you with two phone numbers:

Save mailbox number

You call this phone number to listen to the voice mails left for you.

Menu → → Msg. setup
→ Voice message

Enter mailbox phone number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.

Menu → → Call Forward
→ e. g. Unanswered → Set

Enter call divert number and log on **OK** to network. Divert will be confirmed after a few seconds (see also p. 22).

Play back messages



A new voice mail can be announced as follows:

A symbol with beep or an SMS indicates a new voice mail or that you are receiving an automatic announcement. Dial into your mailbox and listen to your message(s).

Press and hold **1** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services

Menu → → Msg. setup
→ CB services

Some service providers offer information services (info channels.). If reception is activated, your Topic list will supply you with messages on the activated topics.

SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Writing/sending SMS messages

Menu → → New SMS → (write text) → → / (enter phone number or select from Phonebook)
→ **OK**

The SMS is sent to the service centre for transmission.

Receiving SMS

An arrival of a new SMS is announced on display with . To read the SMS, press left soft key.

With you scroll through message line by line. Select **Reply** for a direct reply.

SMS archive

Menu → → SMS archive

The list of SMS messages stored in the phone is displayed.

Special functions

SMS to group

Send SMS as a "circular" to a group.

Options → Send → **Group** → Select group members and send SMS.

Picture&Sound

Insert pictures and sounds into message.

Options → Picture&Sound select.

The menu contains:

Fix animations, Fix sounds, Own animat., Own pictures, Own sounds

MMS

The **Multimedia Messaging Service** enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Writing/sending MMS messages

An MMS consists of the address header and the content.

Menu →  → **New MMS**

Input fields:

To:  /  Phone number/
e-mail address of recipient/s.

Subject: Enter MMS heading (up to 40 characters)

Picture: **Insert**. The picture list is opened for selection.

Additional information

You can also easily send an image by MMS immediately after taking it with the QuickPic Camera (p. 16).

Text: **Edit**. Write text with the help of T9.

Tones/Alerts: **Insert**. Select a melody or record a new melody.

Slide duration:

Enter length of display for individual pages (minimum 0.1 seconds).

Record new melody (ring tone) for MMS

If you press **Insert** in the **Tones/Alerts**: field when completing the input fields, you have the option of recording a new melody for sending messages by MMS.

Press **Record**. Recording starts, and the maximum available time and recording duration are displayed. To end recording, press **Stop**.

Insert additional pages

Options Open menu.

New slide Select.



Send MMS

Options Open menu.

Send Select.

Receive/read MMS



 /  Indicates reception or notification of an MMS.

Depending on the profile setting (p. 19):

- Receive complete MMS
- Open the message. Press **Receiving**, in order to receive the complete MMS, with **Play** automatic MMS presentation. Cancel with any key.

Functions for editing MMS can be found under **Options**.

Message lists/ Message settings

All SMS/MMS messages are stored in one of the following lists according to status.

Inbox

Menu →  → Inbox → SMS/MMS

The list of received SMS or MMS messages is displayed.

Draft

Menu →  → Draft → SMS/MMS

The list of unsent SMS or MMS messages is displayed.

Unsent

Menu →  → Unsent → SMS/MMS

The list of SMS or MMS messages not yet successfully sent is displayed.

Sent

Menu →  → Sent → SMS/MMS

The list of sent SMS or MMS messages is displayed.

T9 settings

Menu →  → Setup
→ Select a function

T9 preferred

Activate/deactivate intelligent text entry (see also p. 13).

Input language

Select language for text entry. Languages with T9 support are marked by the T9 symbol.

SMS profiles, MMS profiles

Menu →  → Setup
→ SMS profiles/MMS profiles

Profiles have to be created for SMS and MMS. The transmission characteristics are defined in these. The data for these may already have been entered. If not, your service provider will supply you with the relevant information. Additional information is available in the comprehensive operating instructions on the Internet at: www.siemens-mobile.com/a65

Surf & fun

Internet browser (WAP)

Menu →  → Select a function

Get the latest information from the Internet that is specifically adapted to the display options of your phone. Internet access may require registration with your service provider.

Home




A connection is established with the Internet provider's portal (may be specified/configured by default by your service provider).

Bookmarks






List of URLs for fast access.

Internet




The browser is activated as soon as you call up the function. The functions of the soft keys vary, depending on the internet page, for example "link" or "menu". The contents of the option menus are also variable. If necessary set how the Internet access should be made. To this end open the browser menu with  and select Setup/Start with....

Additional notes

-  Browser menu.
-  Offline.
-  Online.
-  GPRS online.
-  No network.
- * Select special characters, such as @, ~, \, see p. 13 or
- 0 press repeatedly for:
., ? ! ' " 0 - () @ / : _

End connection

Press and hold  to end the connection and close the browser.

WAP profiles

Menu →  → Internet → Profiles

Preparation of the phone for WAP Internet access depends on your service provider. If these settings have already been applied by the service provider, select and activate profile. If you have to configure the access profile manually, consult your service provider if necessary.

Activate WAP profile

You can change the active profile each time before you access the Internet (if the profile has been set already). For this, select profile, then **Select**.

WAP profile setting

Up to 5 WAP profiles can be configured (may be limited by the service provider). The specifications may vary according to service provider. Select profile, then **Edit** and fill in the data fields.

Select the connection profile: see p. 23.

Games & more

Download games and other applications. You are advised about relevant applications on the Internet. Once you have selected a game or application you can start to download it immediately. Then you can use the application. Most applications include instructions. Applications and games can be found at:

wap.siemens-mobile.com or on the Internet at **www.siemens-mobile.com**

Additional information

To download applications, the WAP profile, HTTP profile and access must be configured (p. 23).

Depending on the service provider, the access and functionality could differ from the present description.

Games and applications

Applications and links that are already stored on the phone are found under:

Menu →  → Games & more

Different functions are available depending on which entry is highlighted:

 **Download new**

Internet The selected Internet page is loaded.

★ **Carry out game/application offline**

Select Loadable application can be started immediately.


★ **Load game/application online**

Select Only description file, application has still to be loaded.

You will find special instructions or information for each game in the option menu.

Key control

The following key control is used for many games (virtual joystick):

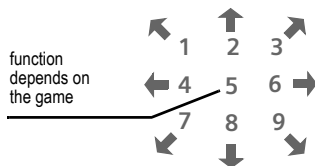

or use the key .

Setup

Profiles

Menu →  → Profiles

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five profiles are standard with default settings, they can be changed however: Normal envi., Quiet environ., Noisy environ., Car Kit, Headset
- You can set two personal profiles (<No Title>).
- The special profile **Aircraft mode** cannot be changed.

Activate

Select default profile or personal profile

→ **Activate**.

Setup

Select profile → **Options** → Change sett.

The list of available functions is displayed:

Car Kit

The profile is only activated automatically as soon as the phone is inserted into the cradle if a Siemens original Car Kit is used.

Headset

The profile is only activated automatically if used with an original Siemens headset.

Aircraft mode

The alarm tone is deactivated. An alarm is only shown on the display. **It is not possible to modify this profile.** The phone will automatically switch off if you select this profile.

Normal mode

The next time you switch on the phone and return to normal operation the default profile will be activated.

Display

Menu →  → Display

→ Select a function

Language

Set the language of the display text. "Automatic" will set the language of your home service provider. Reset to this language in standby status:

***#0000#**

Background

Logo

Color scheme

Own greeting

Big letters

Illumination

Contrast

Screensaver

The screensaver shows a picture on the display as soon as a period that can be set by you has elapsed. The function is ended by an incoming call or by pressing any key.

22 Setup

Call setup

Menu →  → **Call setup**
→ Select a function

Hide ID



When switched on, the display of the calling party shows your phone number (dependent on service provider).

Call waiting




If you are registered for this service, you can check whether it is set and you can activate/deactivate it with **Call waiting**.

Call Forward

You can set the conditions for which calls are diverted to your mailbox or other numbers.


Set up call divert (example):

- All calls

All calls are diverted.  is shown in the top line of the display in standby mode.

- Unanswered

Includes **Unanswered**, **Not reachable**, **No reply**, **Busy**.

Select → **Set** →  (Enter the phone number, to which the call should be diverted) → **OK**

After a short pause, the setting is confirmed by the network.


Other divert options: **Not reachable**, **No reply**, **Busy**

- Status check

After a short pause the current information is shown.

 Condition set.


 Not set.

 Display if status is unknown (e. g. with a new SIM card).

- Clear all

All set diversions are cleared.

Any to answer

Incoming calls can be accepted by pressing any key (except for ).

Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed. The recipient does not hear this beep.

Clock

Menu →  → Clock → Select a function

Time/date

Change → Enter the date first, then the time.

Time format:

Select Format 24h or Format 12h.

Time zones

Specify your current time zone.

Format date

DD.MM.YYYY or MM/DD/YYYY or
MM-DD-YYYY

Show clock

Switch on/off time display.

Buddhist year

Change to Buddhist date (not available in all phones).

Connectivity

Menu →  → Connectivity
→ Select a function

GPRS

Yes / No Switch GPRS on /off.

Data counter

Display connection information.

Data services


Menu →  → Connectivity → Connection profiles → Select function

For the MMS, Wap and Java application at least one connection profile must be set up and activated. If necessary enter CSD settings and GPRS settings (your service provider will supply you with information on this or www.siemens-mobile.com/mobilescustomer care under "FAQ").



Options → Change sett. → **Edit**
→ Enter data → **Save**

HTTP profile

Select profile with . Enter or modify settings. If necessary, check with your service provider for details.

Authentication

Menu →  → Connectivity
→ Authentication → **Change**
→ Activate encrypted WAP dial-up

Security

Menu →  → Security
→ Select function

Auto key lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

Direct call

Only **one** phone number can be dialed. To do so press and **hold** the right soft key.

Only

Restrict calls to SIM-protected numbers in the Phonebook.

Last 10 only


Limit calls to call list of "dialled numbers" (p. 15).

Codes

(see p. 10)

This SIM only

Your phone is prevented from being used with a **different** SIM card.

Menu →  → Security
→ Select a function



Barrings

Network barring restricts the use of your SIM card.

All outgoing: Outgoing calls, except emergency 999 calls, are blocked.

Outgo internat: Only domestic calls are possible.

Outgo internat. x home barred: International calls are not permitted, except for calls to your home country.

All incoming calls: The phone is blocked from receiving all incoming calls.

When roaming: You do not receive any calls outside your home network.

Status check: Query the status of your barrings.

Clear all: Remove all barrings.

Phone identity

Display the phone identity number (IMEI) and software version.

Filesystem clean up

(Phone code is protected)

The file system is defragmented.

Master reset

Rest phone to standard values (factory setting).

Network

Menu →  → **Network**

→ Select a function

Line

Two independent phone numbers have to be registered.

Network info

The list of GSM networks currently available is displayed.

Auto network

If activated, the next network is dialled in the order of your "preferred networks".

Choose network

The network search is restarted.

Preferred network

Set the service providers you prefer when you leave your home network.

Fast search

When this function is active, network re-connection is speeded up (standby time is reduced).

Accessories

Menu →  → **Accessories**

→ Select a function

Car Kit

Only in combination with an original Siemens handsfree Car Kit. If an original Siemens Car Kit Portable is used the profile is activated automatically as soon as the phone is inserted into the cradle.

Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Headset


Only in conjunction with an original Siemens headset. If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in. Accept call with the Call key when the key lock is activated.

Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Ringtones

Menu →  → Select function

You can set the tones to match your needs.

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

Vibrating alert

Activate/deactivate the silent alert (functions in addition to ringer).

Volume

Set the same volume for all ring tones.

Calls, Group calls, Other calls:, Alarm clock, Messages

The ring tones for the stated types of call/functions can be set separately.

More tones...

Menu →  → More tones...
→ Select a function

Call screening

Only calls from numbers that are in the Phonebook or in a predefined group are signalled audibly or by silent alert. Other calls are only displayed.

Key tones

Set acoustic key acknowledge: Click or Tone or Silent


Minute beep

During the call, you will hear a beep once a minute as a reminder.

Info tones

Set service and alarm tones.

Extras

Menu →  → Select function

Alarm clock


The alarm will ring at the time set by you, even when the phone is switched off.



On/off Switch on/off.


Setting

Set the time for the alarm call (hh:mm), then **OK**.

 
Calculator

 Enter number (maximum of 8 characters).

 $\frac{\quad}{\quad}$ \div  \pm Select calculate function.
x


 
 Repeat procedure with other numbers.

Result is displayed.

 **= + - *** Press the right display key repeatedly.

± Toggle between "+" and "-".

% Convert to percent.

  Save, recall number.

e Exponent (maximum of two digits).

Special keys:

***** Set decimal point.

0 Add (press and **hold**).

Stopwatch

Two intermediate times can be recorded and saved.

Reset Reset to zero.

Start/stop.

***** Intermediate time.

SIM services (optional)



Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card. If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the control key (on the left) with symbol .

With the SIM services menu, your phone is ready to support future additions in your service provider's user package. For further information, please contact your service provider.

Fast access

The left soft key and the number keys 2 to 9 (speed dialling numbers) can each be assigned an important phone number or a function. The phone number can then be dialled or the function can be started at the touch of a button.

Left soft key

Assign an Assign function/phone number to this key.

Change (example)

Internet → **Change**

→ Search for application, e.g. New SMS,
Phone number → **Select**

Apply (example)

Key assigned with Phone number/name.
Press and hold **Carol**.

Speed dialling keys

Only possible for keys 2 to 9. Key 1 is reserved for the mailbox.

Change (example)

3 → **Set** → Select application, e.g. New
SMS, Phone number → **Select**

Apply (example)

Press and hold key **3**.

Own stuff

The following folders are provided for organizing your photos: **Pictures**, **Animations**, **Sounds**.

Menu →

Files and folders are displayed.

You can scroll through these lists using (to scroll up and down) and (to jump back from a folder). To open a folder or execute a file using related application press **Open**.

Index structure

Special folders are provided in the file system for the different data types.

Folders	Contents	Format
Pictures	Images	*.bmp *.gif *.jpg *.jpeg
Camera	Own Photos (p. 16)	*.png
Animations	Animations	*.bmx *.gif
Sounds	Ring tones, melodies, sounds	*.mid

The following folders are also included in these main folders:


Download new	This enables you to download new files from the Internet.
EMS	Files that can be received per SMS/MMS.

Questions & Answers

If you have any questions regarding the use of your phone, you can contact us at www.siemens-mobile.com/mobilescustomer care at any time. In addition to this we have listed some frequently asked questions and answers below.


Question	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough. Flat battery.	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display.
Insufficient standby time.	Speed search active. Display illumination switched on.	Deactivate speed search (p. 24). Switch off display illumination (p. 21).
Charging error (charge icon not displayed).	Battery totally discharged. Contact problem. No mains voltage. Wrong charger. Battery faulty.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery. Check power supply and connection to the phone. Check battery contacts and device plug socket, clean them if necessary, then insert battery again. Use different mains power socket, check mains voltage. Only use original Siemens accessories. Replace battery.
SIM error.	SIM card not correctly inserted. SIM card contacts dirty. SIM card with wrong voltage. SIM card damaged (e.g. broken).	Check that the SIM card is inserted correctly (p. 8). Use a dry cloth to clean the SIM card. Use 3 V SIM cards only. Visually inspect the damage. Have SIM card replaced by service provider.
No connection to network.	Weak signal. Outside GSM range. SIM card not valid. New network not authorised. Network barring is set. Network overloaded.	Move to higher location, to a window or open space. Check coverage area of service provider. Contact the service provider. Try manual selection or select a different network (p. 24). Check barrings (p. 24). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 24). Switching the phone off and on may speed this up.

28 Questions & Answers

Question	Possible causes	Possible solution
Calls not possible.	2nd line set. New SIM card inserted. Charge limit reached. Credit used up.	Set first line >>>>> (p. 24). Check for new restrictions. Reset limit with PIN 2 (p. 16). Load credit.
Certain uses of the phone not possible.	Call restrictions are set.	Barrings may be set by your service provider. Check barrings (p. 24).
No entries possible in Phonebook.	Phonebook is full.	Delete entries in Phonebook.
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (p. 22).
SMS (text message)  flashing.	SMS memory full.	To free up capacity, delete or file messages (SMS).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Memory problems for, e.g. messages, ring tones, pictures.	Phone memory full.	Delete files in the applicable areas and unneeded T9 dictionaries.
No WAP access, no download possible.	Profile not activated, profile settings wrong/incomplete.	Activate WAP profile (p. 20), set (p. 20). If necessary ask your service provider.
Message cannot be sent.	Service provider does not support this service. Phone number of the service centre is not set or is wrong. SIM card contract does not support this service. Service centre too busy. Recipient does not have a compatible phone.	Check with your service provider. Set service centre (p. 19). Contact your service provider. Repeat message. Check.
EMS pictures and sounds not displayed at destination phone.	Recipient's phone does not support EMS standard.	
No Internet access possible.	Wrong WAP profile set or settings wrong, incomplete.	Check settings, speak to service provider if necessary.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Questions & Answers 29

Question	Possible causes	Possible solution
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 30).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or removed by your service provider via the SIM card.	Check with your service provider.
Charge counter does not work.	Charge pulse is not transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and insert them again. Do not dismantle phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Set phone to vertical position in air flow. Do not dismantle phone!	

Reset settings to factory default (see also p. 24): *#9999# 

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

www.siemens-mobile.com/customer-care

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

You will also find the most frequently asked questions and answers in the section entitled "Questions and answers" in this user guide.

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press ***#06#**), the software version (to display, press ***#06#**, then info) and if available, your Siemens Service customer number.

Note

Only qualified service personnel must repair equipment.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi 0 26 42 38 00
Argentina 0 80 08 88 98 78

Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 38 98 47 77
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	0 80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09

Netherlands	0 90 03 33 31 00
New Zealand	08 00 57 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 04 60 00
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 07 00 80
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 27 22 11 18
Tunisia	71 86 19 02
Turkey	0 21 65 79 71 00
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Vietnam	84 89 30 01 21
Zimbabwe	04 36 94 24

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or:

www.siemens-mobile.com/conformity.

CE 0682

Technical data

GSM class:	4 (2 watt)
Frequency range:	880 - 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 - 1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850 - 1,990 MHz
Weight:	85 g
Size:	110 x 47 x 23 mm (91 ccm)
Li-Poly battery:	700 mAh
Operating temperature:	-10 °C to 55 °C (14 °F to 130 °F)
SIM card:	3.0 V

Operating time

A full battery will deliver 60 to 250 hours of standby time or 100 to 300 minutes of talktime.

The operating time depends upon the use:

Action taken	Time (min)	Reduces stand-by time by
Making a phone call	1	30 - 90 minutes
Light *	1	40 minutes
Network search	1	5 - 10 minutes
* Keypad entry, games etc.		

Extreme temperatures reduce the phone's standby time considerably. You should therefore avoid the leaving the phone in the sun or on a radiator.

Phone ID

You will need the following details if you lose your phone or SIM card. Please enter here:
the number of the SIM card (on the card):

.....
the 15-digit serial number of the phone (under the battery):

.....
the service provider's Customer Service number:
.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.



The U.S. Food and Drug Administration's (FDA) Center for Devices and Radiological Health Consumer Update on Mobile Phones

FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known – and what remains unknown – about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has

been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna – the primary source of the RF – and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called "cordless phones", which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that handheld mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously – up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safe-

ty of mobile phones. This research has resulted in two findings in particular that merit additional study:

1. In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.¹

2. Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus follow-up research is necessary.²

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³
- In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used. Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies

and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is

called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- Support needed research into possible biological effects of RF of the type emitted by mobile phones;
- Design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health.

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products – and at this point we do not know that there is – it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who

spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle,
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package, or
- a headset with a remote antenna to a mobile phone carried at the waist.

Where can I find additional information?

For additional information, see the following websites:

- Federal Communications Commission (FCC) RF Safety Program (select "Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters"):
<http://www.fcc.gov/oet/rfsafety>

- World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As):
<http://www.who.int/emf>
- United Kingdom, National Radiological Protection Board:
<http://www.nrp.org.uk>
- Cellular Telecommunications Industry Association (CTIA):
<http://www.wow-com.com>
- U.S. Food and Drug Administration (FDA) Center for devices and Radiological Health:
<http://www.fda.gov/cdhr/consumer/>

¹ Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.

² Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, DC; and personal communication, unpublished results.

³ Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915- MHz simulated mobile phone signal on cognitive function in man. Int. J. Radiat. Biol., April 8, 1999.

⁴ Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors; a case-control study. Int. J. Oncol, 15: 113–116, 1999.

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, please contact your local service facility.



Your Siemens wireless phone gives you the power to communicate by voice – almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

Get to know your phone and its features such as speed dial and redial.

Carefully read your instruction manual and learn to take advantage of valuable features most phones offer including, automatic redial and memory dial – most phones can store up to 99 numbers in memory dial. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

When available, use a hands-free device.

A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your phone or a speaker phone accessory, take advantage of these devices if they are available to you.

Position your phone within easy reach.

Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.

Suspend conversations during hazardous driving conditions or situations.

Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

Do not take notes or look up phone numbers while driving.

If you are reading an address book or business card while driving a car, or writing a "to do" list, then you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

Dial sensibly and assess the traffic.

If possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip, or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip – dial only a few numbers, check the road and your mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting.

Stressful or emotional conversations and driving do not mix – they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations that have the potential to divert your attention from the road.

Use your phone to call for help.

Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 9-1-1 in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it is a free call on your wireless phone.

Use your phone to help others in emergencies.

Your wireless phone provides you a perfect opportunity to be a "good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergencies where lives are in danger, call 9-1-1, as you would want others to do for you.

Call roadside assistance or a special wireless non-emergency assistance number when necessary.

Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to 9-1-1. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless numbers.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1 (888) 901-SAFE, or visit our Web site at: www.wow-com.com

Provided by the Cellular Telecommunications Industry Association (CTIA)

Intellectual Property Restrictions

All Intellectual Property, as defined below, which is owned by or otherwise the property of Siemens Information and Communications Mobile, LLC ("Siemens"), its affiliates, partners or suppliers, relating to the Phone, including but not limited to accessories, parts or software relating thereto (the "Phone System"), is proprietary under federal laws, state laws and International treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) disassemble, decompile, reverse engineer, prepare derivative works from, modify or make any other effort to create source code from the software. No title to ownership in the Intellectual Property is transferred to you through purchase or possession of the Phone or its components. All applicable rights of the Intellectual Property shall remain with Siemens, its affiliates, partners or suppliers.

Siemens will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software,

apparatus or devices not furnished by Siemens, nor will Siemens have any liability for the use of ancillary equipment or software not furnished by Siemens which is attached to or used in connection with the Product. The foregoing states the entire liability of Siemens with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for Siemens certain exclusive rights for copyrighted Siemens software, such as the exclusive rights to reproduce and distribute copies of such Siemens software. Siemens software may be used only in the Product in which the software was originally embodied when purchased, and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such Siemens software or exercise of rights in such Siemens software is permitted. No license is granted by implication, estoppel or otherwise under Siemens patent rights or copyrights.

Accessories

Multitainment QuickPic Camera IQP-500

Fashion & Carry Tour Case FCT-650
Belt Case FCL-600

 
Energy Li-Ion Battery EBA-510
Travel Charger ETC-500 (EU)
Travel Charger ETC-510 (UK)
Travel Charger ETC-520 (USA)
Car Charger Plus ECC-600
Desktop Charger EDC-510

Handsfree Portable Headset Basic HHS-500
Headset HHS-510
Headset Purestyle HHS-610

Office Data Cable DCA-500
Data Cable USB DCA-510

Car Solutions Car Kit Portable HKP-500

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:



SAR (A65)

RF EXPOSURE/SPECIFIC ABSORPTION RATE (SAR) INFORMATION

THIS SIEMENS A65 PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO ELECTROMAGNETIC FIELDS.

Your cell phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy established by the Federal Communications Commission (FCC) of the U.S. Government and by Health Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed and confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for cell phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit established by the FCC and by Health Canada is 1.6 W/kg**. Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified

power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and the manufacturer must certify to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body), reported to the FCC and available for review by Industry Canada. The highest SAR value for this Siemens A65 when tested for use at the ear is

0.438 W/kg***

and when worn on the body⁺ is

0.507 W/kg***

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Internet Association (CTIA) web-site at www.phonefacts.net or the Canadian Wireless Telecommunications Association (CWTA) website www.cwta.ca

SAR information on this Siemens A65 phone is on file with the FCC and can be found under the Display

Grant section of
<http://www.fcc.gov/oet/fccid>
after searching on FCC ID **PWX-A65**.
While there may be differences
between the SAR levels of various
phones and at various positions, all
Siemens products meet the
governmental requirements for safe
RF exposure.

***SAR values may vary depending
on national requirements and
network bands. SAR information
for different regions can be
found at **www.siemens-mobile.com**

- + This cell phone has been tested
for body worn operation and
meets FCC RF exposure guide-
lines when used with a Siemens
accessory designated for this
product, where available, or
when used with a carry accesso-
ry that contains no metal and
that positions the handset at
least 10 mm/0.39 in is the cor-
rect testing distance from the
body. Use of other carry accesso-
ries may not ensure compliance
with FCC RF exposure guide-
lines.
- * The World Health Organization
(WHO, CH-1211 Geneva 27,
Switzerland), on the basis of the
current knowledge, does not see
any necessity for special
precautionary measures when
using cell phones.
Further information:
www.who.int/peh-emf,
www.mmfa.org,
www.siemens-mobile.com.
- ** averaged over 1 g of tissue.

End user license agreement

This Software License Agreement ("Agreement") is between You and Siemens Information and Communication Mobile, LLC and/or one of its affiliates ("Licensor"). The Agreement authorizes You to use the Software specified in Clause 1 below, which may be included on Your phone, stored on a CD-ROM, sent to You by electronic mail, downloaded from Licensor's Web pages or servers or from other sources under the terms and conditions set forth below. This is an agreement on end user rights and not an agreement for sale. Licensor continues to own the copy of the Software and any other copy that You are authorized to make pursuant to this Agreement. Read this Agreement carefully before installing, downloading or using the Software. Further, by installing, downloading and/or using the Software, You agree to the terms and conditions of this Agreement.

1. Software.

As used in this Agreement, the term "Software" means, collectively: (i) all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided; (ii) related Licensor or third party software; (iii) digital images, stock photographs, clip art or other artistic

works ("Stock Files") (iv) related explanatory written materials ("Documentation"); (v) fonts (vi) upgrades, modified versions, updates, additions and copies of the Software, if any, licensed to You by Licensor (collectively "Updates") and (vii) any other possible documentation related thereto.

2. End user rights and use.

Licensor grants to You a non-exclusive, non-transferable end user right to install the Software or use the Software installed on the phone. The Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

3. Limitations on end user rights.

- (a) You may not copy, distribute, or make derivative works of the Software.
- (b) You may not use, modify, translate, reproduce or transfer the right to use the Software or copy the Software except as expressly provided in this Agreement.
- (c) You may not resell, sublicense, rent, lease or lend the Software; except You may permanently transfer all of Your rights as set forth in the Agreement only as part of a permanent sale or transfer of the phone, provided the recipient agrees to the terms of this Agreement.

(d) You may not reverse engineer, reverse compile, disassemble or otherwise attempt to discover the source code of the Software (except to the extent that this restriction is expressly prohibited by law) or create derivative works based on the Software.

(e) You shall not display, modify, reproduce or distribute any of the Stock Files included with the Software.

(f) You shall not display, modify, reproduce or distribute any of the pre-loaded content included with the software unless permitted as stated in the User Guide or in the prompts in the Software. In the event that You are allowed to display, modify, reproduce or distribute certain parts of the pre-loaded content, You shall review the "Readme" files associated with the pre-loaded content (contained on the CD) to ascertain what rights You have with respect to such materials. Pre-loaded content may not be used in the production of libelous, defamatory, fraudulent, infringing, lewd, obscene or pornographic material or in any otherwise illegal manner. You agree that You shall only use the pre-loaded content in a manner that complies with all applicable laws, including, but not limited to, applicable restrictions concerning copyright and other intellectual property

rights. You may not register or claim any rights in the pre-loaded content or derivative works thereof.

(g) You agree that You shall only use the Software in a manner that complies with all applicable laws in the jurisdiction in which You use the Software, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights.

4. Copyright.

Licensor and/or its software suppliers and their respective affiliates own the Software and all rights, including without limitation including proprietary rights therein, are protected by international treaty provisions and other applicable national laws of the country in which it is being used. The structure, organization and code of the Software are the valuable trade secrets and confidential information.

5. Multiple copies/updates.

If the Software supports multiple platforms or languages, if You receive the Software on multiple media, or if You otherwise receive multiple copies of the Software, the number of phones on which all versions of the Software are installed shall be one phone. If the Software is an Update to a previous version of the Software, You must possess a valid end user right to such previous

version in order to use the Update and You may use the previous version for ninety (90) days after You receive the Update in order to assist You in the transition to the Update. After such time You no longer have a right to use the previous version, except for the sole purpose of enabling You to install the Update.

6. Commencement & termination.

This Agreement is effective from the first date You use or install the Software. Your end user rights automatically and immediately terminate without notice from Licensor if You fail to comply with any provision of this Agreement. In such event, You must immediately delete, destroy or return at Your own cost and expense, and without entitlement to any refund of the purchase price, the phone and the Software, and all related material to Licensor.

7. EXCEPT AS EXPRESSLY PROVIDED IN THE LIMITED WARRANTY FOR THE PHONE, YOU ACKNOWLEDGE THE SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW NEITHER LICENSOR, LICENSOR'S SOFTWARE SUPPLIERS OR THEIR RESPECTIVE AFFILIATES, NOR THE COPYRIGHT HOLDERS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANT-

ABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS. THERE IS NO WARRANTY BY LICENSOR OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR FREE.

8. NOT FAULT TOLERANT. THE SOFTWARE MAY CONTAIN TECHNOLOGY THAT IS NOT FAULT TOLERANT AND IS NOT DESIGNED, MANUFACTURED, OR INTENDED FOR USE IN ENVIRONMENTS OR APPLICATIONS IN WHICH THE FAILURE OF THE LICENSED SOFTWARE COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE OR FINANCIAL LOSS.

9. Limitation of liability.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL LICENSOR OR LICENSOR'S SOFTWARE SUPPLIERS OR THEIR RESPECTIVE AFFILIATES AND EMPLOYEES BE LIABLE FOR ANY LOST PROFITS, REVENUE, SALES, DATA OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, PERSONAL INJURY, INTERRUPTION OF BUSINESS, LOSS OF BUSINESS INFORMATION OR FOR ANY SPECIAL, DIRECT, INDIRECT, INCIDENTAL, ECONOMIC,

COVER, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY ARISING OUT OF THE USE OF OR INABILITY TO USE THE SOFTWARE, EVEN IF LICENSOR OR ITS SOFTWARE SUPPLIERS ARE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME COUNTRIES/STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY, BUT MAY ALLOW LIABILITY TO BE LIMITED, IN SUCH CASES, THE LIABILITY OF LICENSOR, ITS SOFTWARE SUPPLIERS AND THEIR RESPECTIVE AFFILIATES AND EMPLOYEES SHALL BE LIMITED TO, AT LICENSOR'S OPTION, EITHER (A) RETURN OF THE PRICE PAID LESS A REASONABLE AMOUNT FOR USAGE, OR (B) REPAIR OR REPLACEMENT OF THE SOFTWARE THAT DOES NOT MEET THE LIMITED WARRANTY PROVIDED WITH THE PHONE AND WHICH IS RETURNED IN ACCORDANCE WITH THE REQUIREMENTS OF THE LIMITED WARRANTY.

Nothing contained in this Agreement shall prejudice the statutory rights of any party dealing as a consumer. Nothing contained in this Agreement limits Licensor's liability to You in the event of death or personal injury resulting from Licensor's negligence if law prohibits such a

limitation. Licensor is acting on behalf of its software suppliers and their respective employees and affiliates for the purpose of disclaiming, excluding and/or restricting obligations, warranties and liability as provided in this clause 9, but in no other respects and for no other purpose.

10. Technical support.

Licensor has no obligation to furnish You with technical support except as agreed in writing between You and Licensor in the Limited Warranty provided with the phone.

11. Export control.


The Software may be subject to export regulations of the United States and other countries. You agree that You shall comply with all applicable export laws, restrictions and regulations of the United States or foreign agencies or authorities, and shall not export, or transfer for the purpose of re-export, any Software, product or technical data received under this Agreement or any Software or product produced by use of such technical data, including processes and services, in violation of any applicable restrictions, laws or regulations, or without all necessary approvals.

50 End user license agreement


12. Applicable law & general provisions.


This Agreement shall be governed by and construed in accordance with the laws of the State of California without regard to its conflicts of laws rules. This is the entire agreement between Licensor and You relating to the Software and it supersedes any prior representations, discussions, undertakings, end user agreements, communications or advertising relating to the Software.

Menu tree

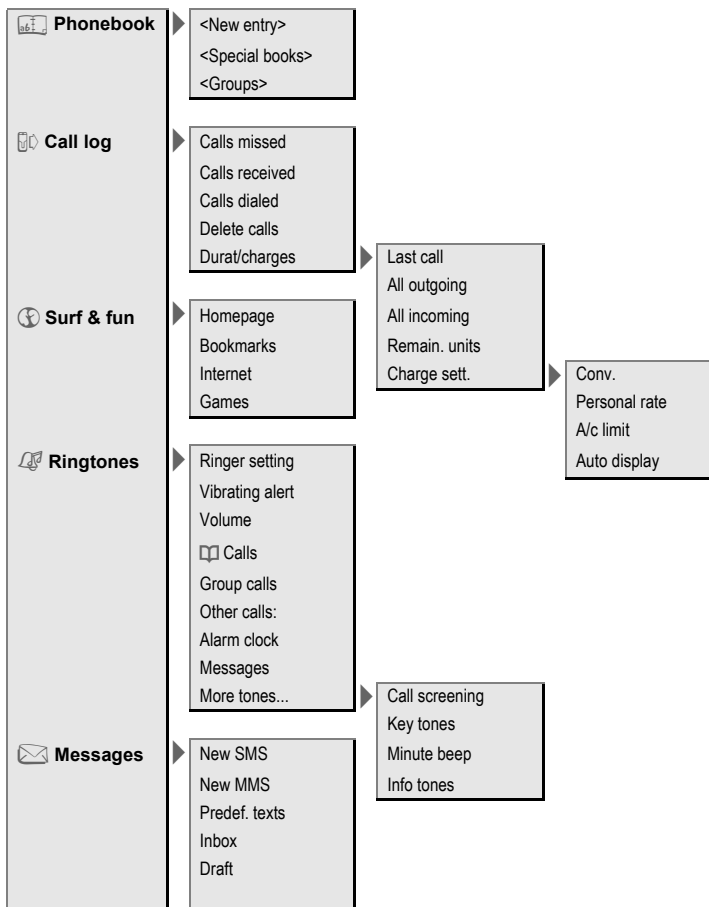


52 Menu tree

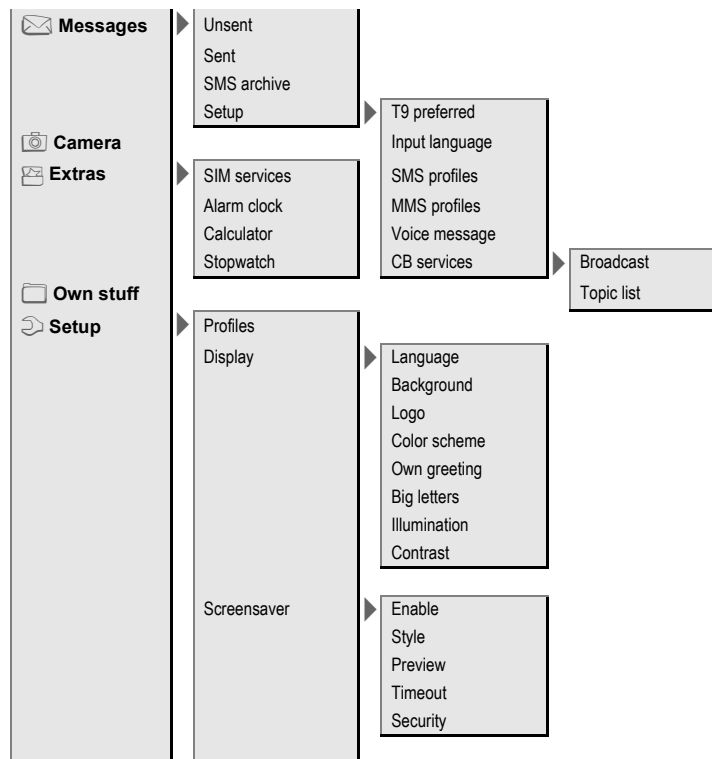

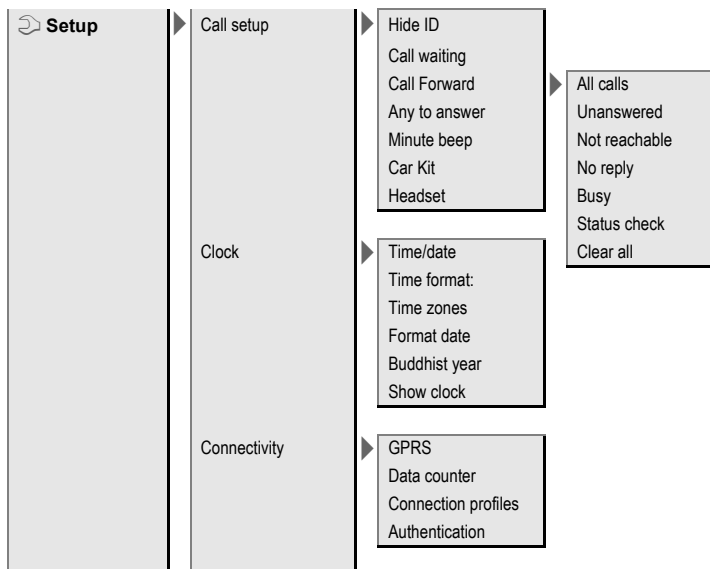

54 Menu tree

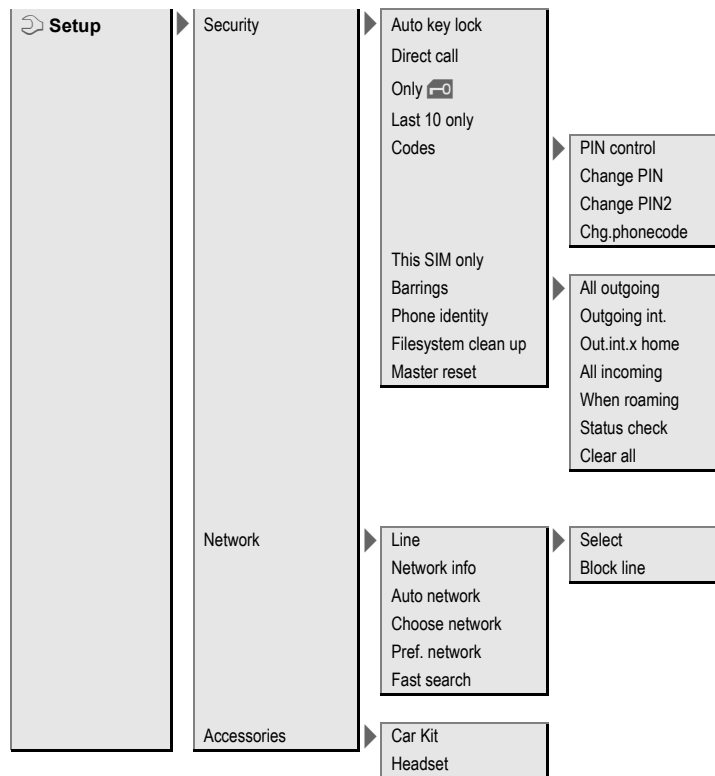

Index

A

Accessories	43
Account limit	16
Alarm clock	25
Alarm tones	25
All calls (call time/charge)	15
All calls (diversion)	22
All incoming (Barrings)	24
Answering service (in the network)	16
Any key answer (answer call)	22
Application (download)	20
Archive (SMS)	17
Authentication	23
Auto display	
Clock	23
Duration/charges	16
Automobile accessories	43

B

Battery	
charge	8
insert	8
operating time	32
Battery operating time	32
Bookmarks (WAP)	19
Busy number	11

C

Calculator	25
Calculator functions	25
Call	
accept/end	11
barred	24
charges	15
conference	12
divert	22, 53
End	11
reject	12
Call records	15
Calls dialled (call list)	15
Calls received (call list)	15
Camera	16
Car Kit	
Accessories	43
Setting	22
Care of phone	31
CB services	17

Cell Broadcast (CB)	17
Charge battery	9
Charge rate	16
charges	15
Clock	23
Colour schemes	21
conference	12
Connection profile	23
Contrast (message on display)	21
CSD settings	23
Customer care	30

D

Data exchange (settings)	23
Data service	23
Date format	23
Dialling with number keys	11
Dial-up access (connection)	23
Directory (own files)	26
Display	
Colour schemes	21
contrast	21
illumination	21
Symbols	7
Upper-case letters	21
Display (settings)	21
Divert	22
Driving safety	40
Duration/charges	15

E

Emergency number	10
End user license agreement	46
Entry no. (phonebook)	14
Extras	25

F

Factory settings	24
Fast access	26
Fast search	24
Filter	
Incoming calls	25
Flashlight	16

G

Games & More	20
Games (download)	20
Getting started	8

56 Index

Group	15
SMS to group	17

H

Handsfree function	12
Headset	
Accessories	43
Setting	24
Headset volume	11
Hide ID	22
Hotline	30
HTTP profile	23

I

Identity number (IMEI)	24
Illumination (display)	21
IMEI number	24
Inbox	
SMS	19
Information services (CB)	17
Input language (T9)	13
International dialling code	11
Internet	19

J

Java	23
------------	----

L

Last 10 only	23
Legal notices	2
Limit (call time/charge)	16
Logo, provider logo	21
Loss of phone, SIM card	32

M

Mailbox	16, 17
Maintenance of phone	31
Menu	
control	10
Menu tree	51
Message	
CB	17
MMS	18
Setup	19
SMS	17
Minute beep	22, 25
Missed calls (call list)	15
MMS	
Profiles	19
receive	18
write	18

N

Network	
barrings	24
connection	24
Setup	24

O

Only 	23
Only this SIM	23
Own files	26
Own greeting	21

P

Phone (settings)	22
Phone data	32
Phone identity number (IMEI)	24
Phone number transfer on/off	22
Phonebook	
call an entry	14
new entry	14
Picture in Phonebook	15
Pictures & sounds (SMS)	17
PIN	
Change	10
control	10
enter	9
error	28
Pocket calculator	25
Predefined text	14
Prefix	11
Preventing accidental activation	11
Product data	32
Profiles	
Connection profile	23
HTTP	23
MMS	19
phone	21
SMS	19
WAP	20
Provider logo	21

Q

Questions & Answers	27
---------------------------	----

R

Redial previous numbers	11
Ring tones	25
Ringer setting	25

S

Safety precautions	4
Screensaver	21
Second phone number	24
Security	10, 23
Security codes	10
Service tones	25
Setup	
Clock	23
Data connection	23
display	21
Divert	22
MMS	19
Network	24
phone	22
Security	23
SMS	19
Short message (SMS)	17
Signal strength	9
Silent alert	25
SIM card	
clear barring	11
insert	8
problems	27
SIM services (optional)	26
SMS	
Archive	17
lists	19
Picture & sounds	17
Profiles	19
read	17
T9 input	13
to group	17
write	17
SOS	10
Special characters	13
Speech time (battery)	32
Speed dialling keys	26
Standard values	24
Standby mode	10
Standby time	32
Stopwatch	25
Surf & Fun	19
Switch on	9
Symbols	7

T

T9	
Text entry	13
word suggestions	13
Technical data	32
Text entry with T9	13
Text entry without T9	12
Time zones	9, 23
Time/Date setting	23

U

Unanswered	22
Upper, lowercase letters	12
Upper-case letters (message on display)	21

V

Voice message (mailbox)	16
Volume, handset	
Headset volume	11
Profiles	21
Ring tone	25

W

Wallpaper	21
-----------------	----